


Artemis

Wall-mount Installation Instructions



wolf drapery

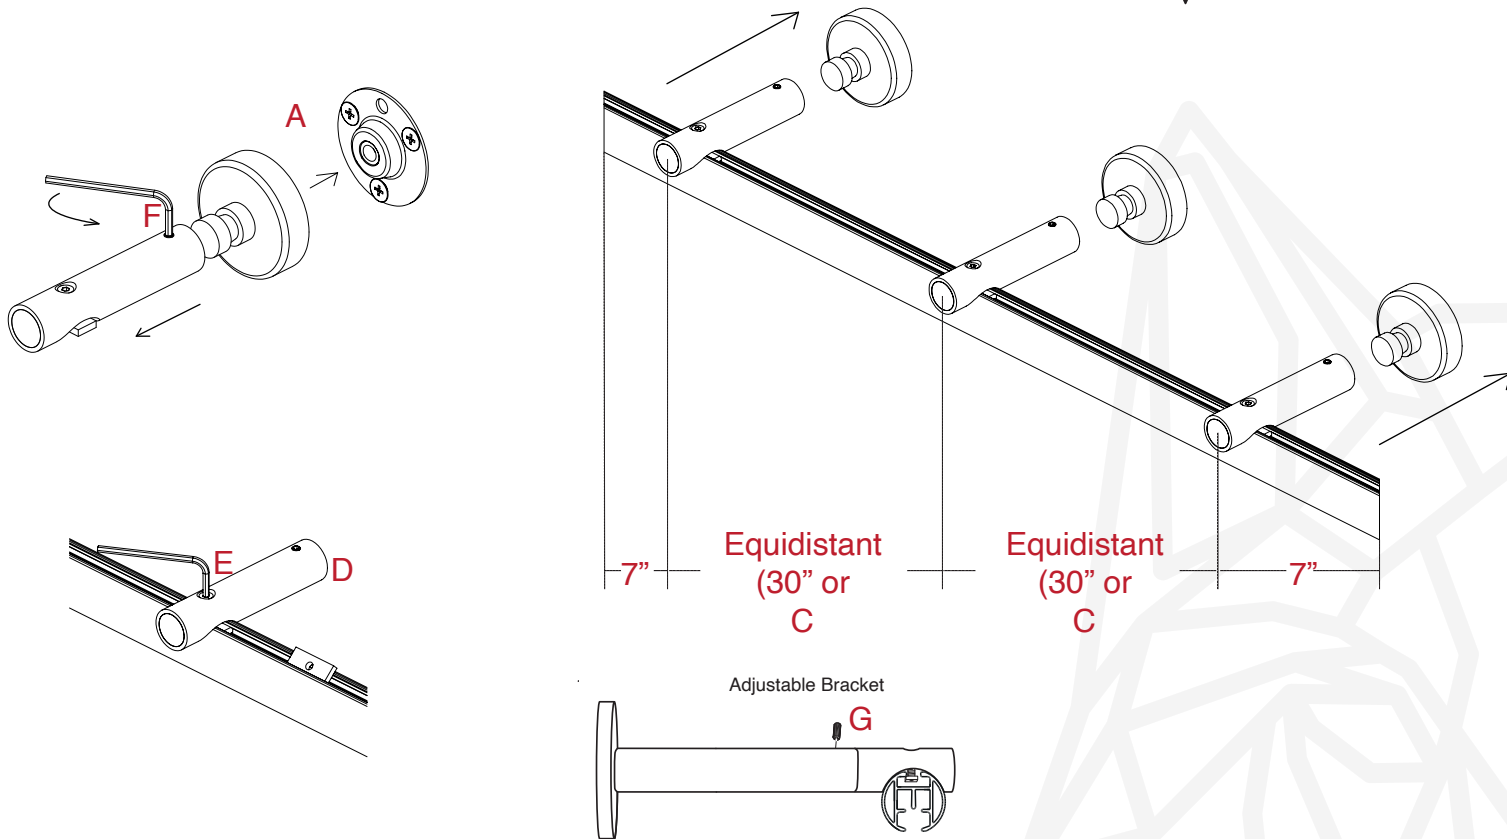

1. Install the wall mount brackets.
 - a. The base plate of the bracket is a 3-part piece. A base plate, a base plate cover **A** and a stem.
2. Install the base plates to the wall, with the center of the plate $1 \frac{3}{8}$ " above the height of your drape. This will allow for a $\frac{1}{8}$ " clearance from the bottom of the drape to the floor. Brackets should **B** be installed 7" from each end and **C** equidistant between subsequent brackets.
3. Place the base plate cover over the base plate and screw on the stem.
4. Install the bracket arms **D** to the top of the rail. Loosen the **E** screws at the top of the bracket arms at the rail in order to slide them into position. Do not tighten screws. Leave them slightly loose to allow you to move them into place.
5. Align the bracket arms **D** with the wall brackets **A** and slide the bracket arms into the base plates. **F** Tighten set screws.
6. Tighten screws at the top of the **E** rail.
7. Set screw **G** allow the adjustment of the distance of the motorized rod from the wall (adjustable wall mount bracket only). Align all the brackets and then tighten **H** all of the set screws.
8. Check to make sure all of the set screws **E F G** have been tightened.
9. You are now ready to install your favorite motor and set it's limits according to the manufacturers' instructions.
10. Check your heights to make sure the distance from the bottom of the rod to the floor is $\frac{1}{4}$ " longer